

Components Parts List

ITEM	PART NUMBER	DESCRIPTION
1.	000167	Pump Flange Gasket
2.	000903	3 HP, 1 Phase, Pump and Motor Assembly, Gusher-Ingersoll-Rand
	000904	3 HP, 3 Phase, Pump and Motor Assembly, Gusher-Ingersoll-Rand
3.	000169	Turntable Gear Motor
4.	000138	Heater Element (1 Phase)
	000378	Heater Element (3 Phase)
5.	000146	Thermostat
6.	000132	5/8" Bushing
7.	000133	3/4" Bushing
8.	000171	Nozzle
9.	000175	Retaining Ring

Controls Parts List

ITEM	PART NUMBER	DESCRIPTION
1.	000142 ELR42BE35AF106	Contactor (1 Phase) Contactor (3 Phase)
2.	000144	Timer
3.	001271 & 002007	Selector Switch with contact block
4.	00143	Safety Switch
5.	000140	Pilot Light, 125 V, Green
6.	000141	Pilot Light, 250 V, Red
7.	000989	Fuse 2 AMPS
8.	001286 000993	Fuse 50 AMPS (1 Phase) Fuse 25 AMPS (3 Phase)
9.	001002 002053	Fuse 15 AMPS (1 Phase) Fuse 7 AMPS (3 Phase)
10.	001284	Fuse 1.6 AMPS
11.	001285	Transformer

Controls Figure

- 1. Door Safety Switch
- 2. 30 min. Cycle Timer
- 3. Green Pump Indicator Light
- 4. On/Off Heater Switch

- 5. Red Heater Indicator Light
- 6. On/ Off Oil Skimmer Switch
- 7. Orange Oil Skimmer Indicator Light
- 8. Digital Timer – Oil Skimmer

- 9. Blue Low Water Shut-Off Indicator Light
- 10. Digital Timer - Heater

